

Kit 1019

AUDI A4, 4-dr Sedan, 95-00 / *95-01

 
 
AUDI S4, 4-dr Sedan, 97-01/ *00-02

AUDI A4 Avant, 5-dr Estate, 96-01



AUDI A4, 5-dr Wagon, *97-01

*North America



480R
754

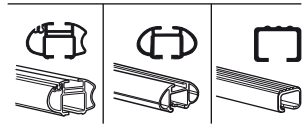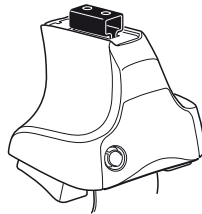

480

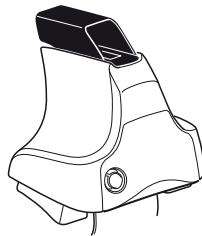  

750

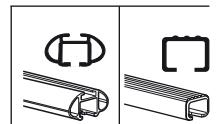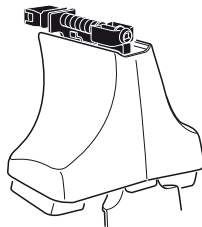  

**Max.
60 kg**
**Max.
132 lbs**

x1
 x4
 x4
 x4
 x4

480R/754

x1
 x4
 x4
 x4

480

x1
 x4
 x4

750

x2 x2 x2 x4	x2	x2 x2 x4 x4	x2 x2	x2
----------------------	----	----------------------	----------	----

x4
 x2
 x1
 x1

x1

 
 
Kit




3




754

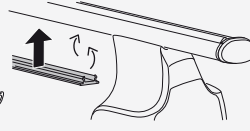

750

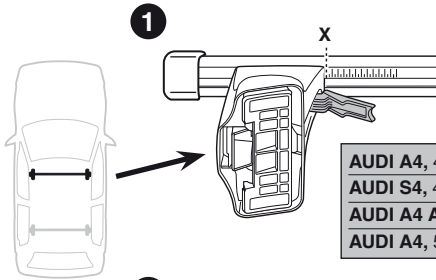 

	X
AUDI A4, 4-dr Sedan, 95-00 / *95-01	28
AUDI S4, 4-dr Sedan, 97-01/ *00-02	28
AUDI A4 Avant, 5-dr Estate, 96-01	27,5
AUDI A4, 5-dr Wagon, *97-01	27,5

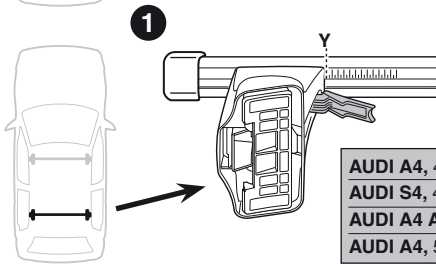 


	Y
AUDI A4, 4-dr Sedan, 95-00 / *95-01	26
AUDI S4, 4-dr Sedan, 97-01/ *00-02	26
AUDI A4 Avant, 5-dr Estate, 96-01	23,5
AUDI A4, 5-dr Wagon, *97-01	23,5





480R



 480

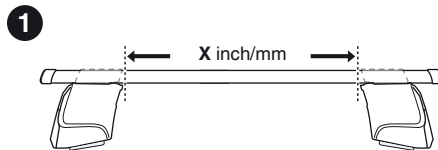

	X inch	X mm
AUDI A4, 4-dr Sedan, 95-00 / *95-01	36 ⁵ / ₈ "	931 mm
AUDI S4, 4-dr Sedan, 97-01/ *00-02	36 ⁵ / ₈ "	931 mm
AUDI A4 Avant, 5-dr Estate, 96-01	36 ¹ / ₂ "	926 mm
AUDI A4, 5-dr Wagon, *97-01	36 ¹ / ₂ "	926 mm

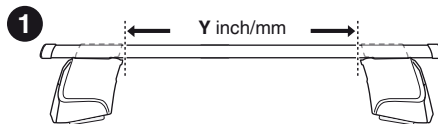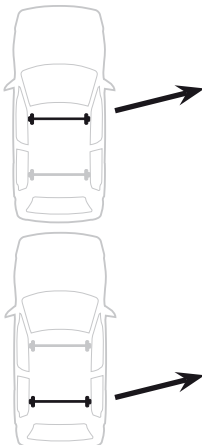  

	Y inch	Y mm
AUDI A4, 4-dr Sedan, 95-00 / *95-01	35 ⁷ / ₈ "	911 mm
AUDI S4, 4-dr Sedan, 97-01/ *00-02	35 ⁷ / ₈ "	911 mm
AUDI A4 Avant, 5-dr Estate, 96-01	34 ⁷ / ₈ "	886 mm
AUDI A4, 5-dr Wagon, *97-01	34 ⁷ / ₈ "	886 mm

 
 
 
 
 
4

AUDI A4, 4-dr Sedan, 95-00 / *95-01






AUDI S4, 4-dr Sedan, 97-01/ *00-02

AUDI A4 Avant, 5-dr Estate, 96-01

AUDI A4, 5-dr Wagon, *97-01

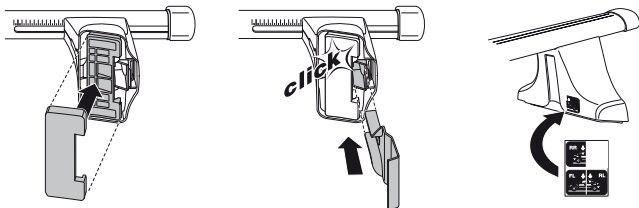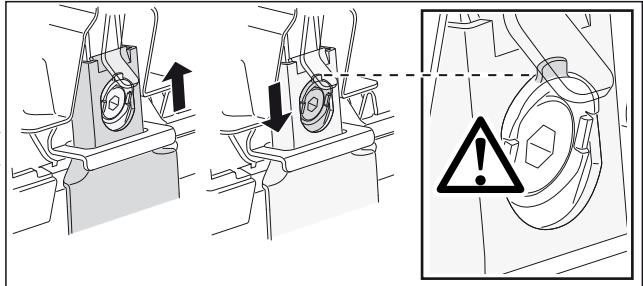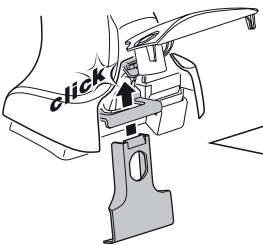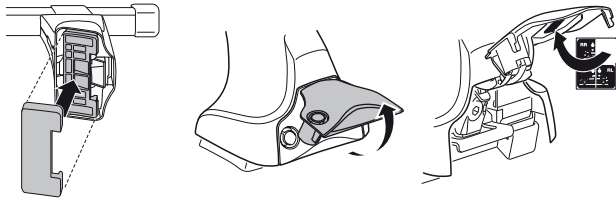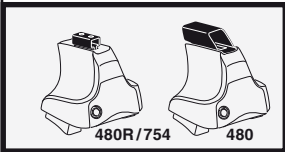

5

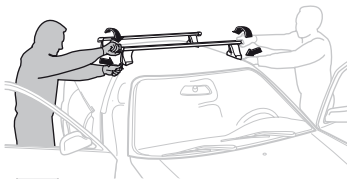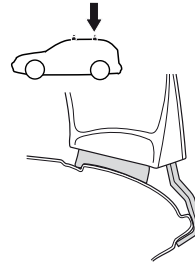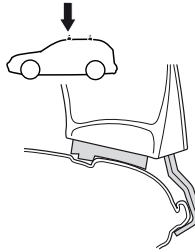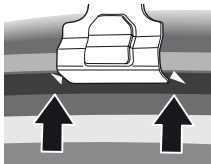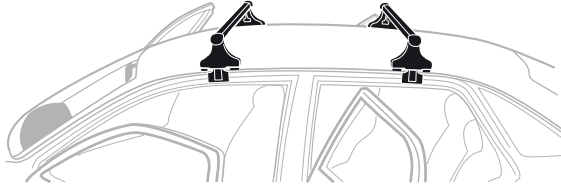     

- GB/US** Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Serrare alternativamente
PT Aperte alternadamente
S Dra åt växelvis

- FIN** Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pieļieciet pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно
CZ Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.
SK Doťahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függetlenül szorítandó
GR Σφίγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชั้้นในแบบสลับ

6



480R/754



480




 
*
3 Nm




*





*
≈ 3 Nm

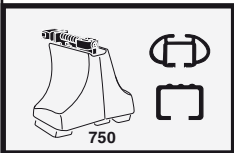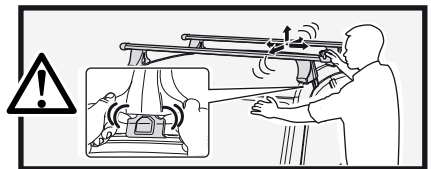


750

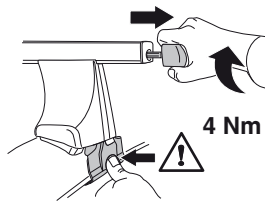 


4 Nm

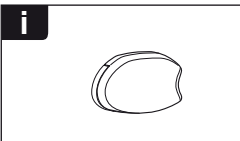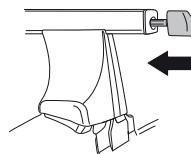  


i

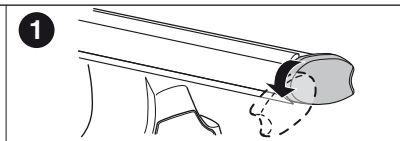 


1

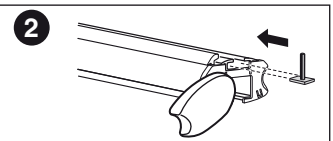 


2

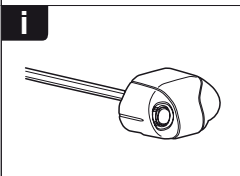 


i

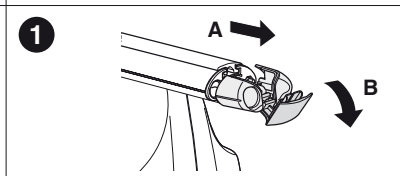 


1

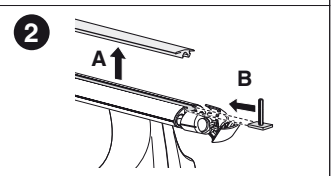 


2

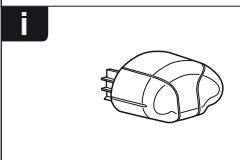 

i

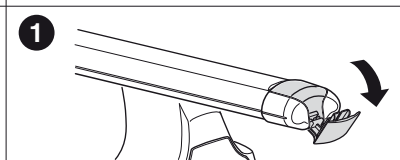 

1

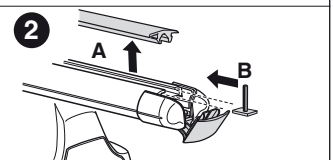 

2



THULE
SWEDEN
**ONE
KEY
SYSTEM**



- 544 (x4)
- 596 (x6)
- 588 (x8)
- NA 510 (x10)
- EUR 452 (x12)
- ASIA



WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
customer.service@thule.com

www.thule.com